


Storage and Retrieval Module (SRM)

Technical Data Sheet

The Storage and Retrieval Module stores sample tubes from the automation system in a temperature controlled and protected environment. It consists of a storage worktable and an automatic refrigerator. When stored, a sample tube can be retrieved based on a Host LIS, middleware, or user request. In this case, the rack containing the requested sample tube is retrieved from the storage worktable and the tube is loaded onto the tube carrier at the loading position on track. After a predefined, configurable time interval, the sample tubes are discarded into the waste container located in the waste area nearby the SRM.

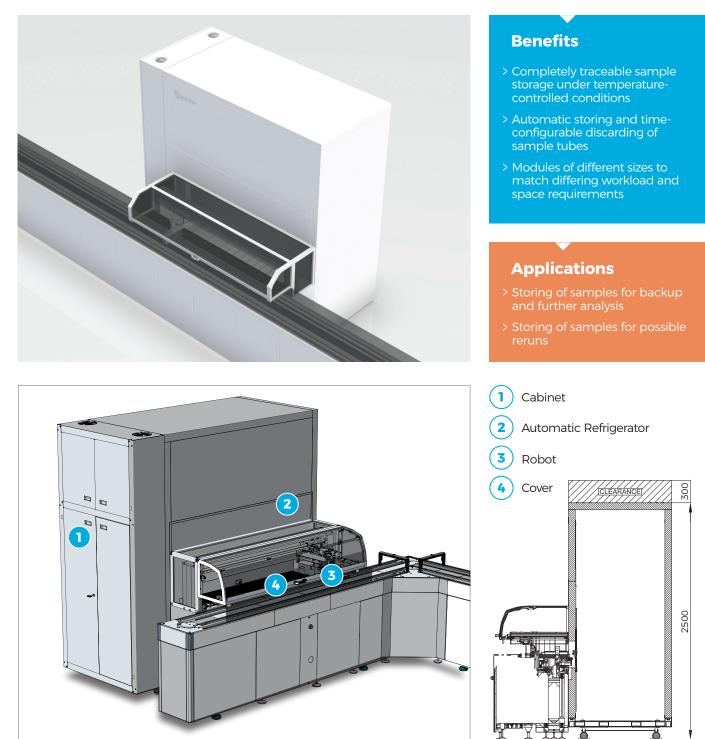

Main Features

Throughput	Up to 800 tubes/h (loading/unloading) 	
Walk-away capacity	1000 tubes (Waste capacity)	
Tube specifications		
Sample type	All (Spun and Unspun)	
Cap type	Capped and Sealed	
Dimensions (mm)	13x75, 13x100, 16x75, 16x100	
Position along the automation	In Post-analytical Area, after all analyzers and before Input area	

Declared values are indicative of maximum performance obtained in optimized and standardized processing conditions, as tested by Inpeco. Historical field values should be used for system sizing and layout definition

Technical Specifications

Dimensions (LxHxD) (mm)

Main clearances (left x right x front) (mm)

Weight - only module (Kg)

Weight - including racks and tubes*(Kg)

Compressed air (NL/min)

Power inlet point


Maximum continuous current (A)

Maximum alternate current (A)

Real power consumption (W)

Heat (BTU/h)

* The SRM weight has been defined by hypotising the module filled only with fully filled 16x100 tubes.

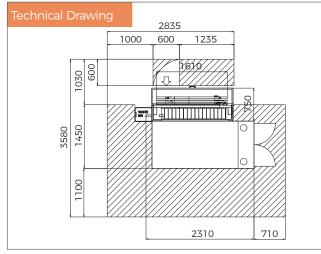


Module dimensions and clearances expressed in mm.

Inpeco SA

Via Torraccia 26 6883 Novazzano Switzerland inpeco.com

in 🖌 🗖 f

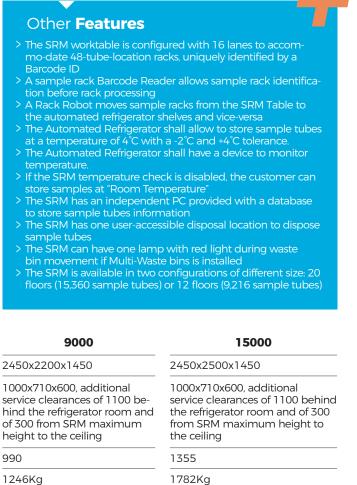

9.53(Standard)

7.32 (HT)

230 Vac

/

16

2944

10009.6

Ordinary Maintenance		
Operator ¹	/	
Service ²	Every 90-180 days, according to operations	

¹ According to Operation Manual. ²The periodicity depends also on the routine tubes/day. For more details refer to Service Manual.

Part Numbers	FlexLab Standard	FlexLab HT
Main module	FLX-507-02	FLX-507-11
Configuration 9000	FLX-230-02	FLX-230-11
15000	FLX-207-02	FLX-207-11
Multi-Waste	N.A.	N.A.

N.A. = Not Available.

9.53(Standard)

7.32 (HT)

230 Vac

1

16

2944

10009.6